HOME
DECORATORS
C O L L E C T I O N

HDC# 09206 MFG# TW-18540WE / TW-18540EO
REFLECTIONS BATH VANITY 35"Hx48"Wx22"D

ASSEMBLY INSTRUCTIONS

Note: 1. Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.
2. You need at least 2 people to finish the assembly of this product.

Made In China

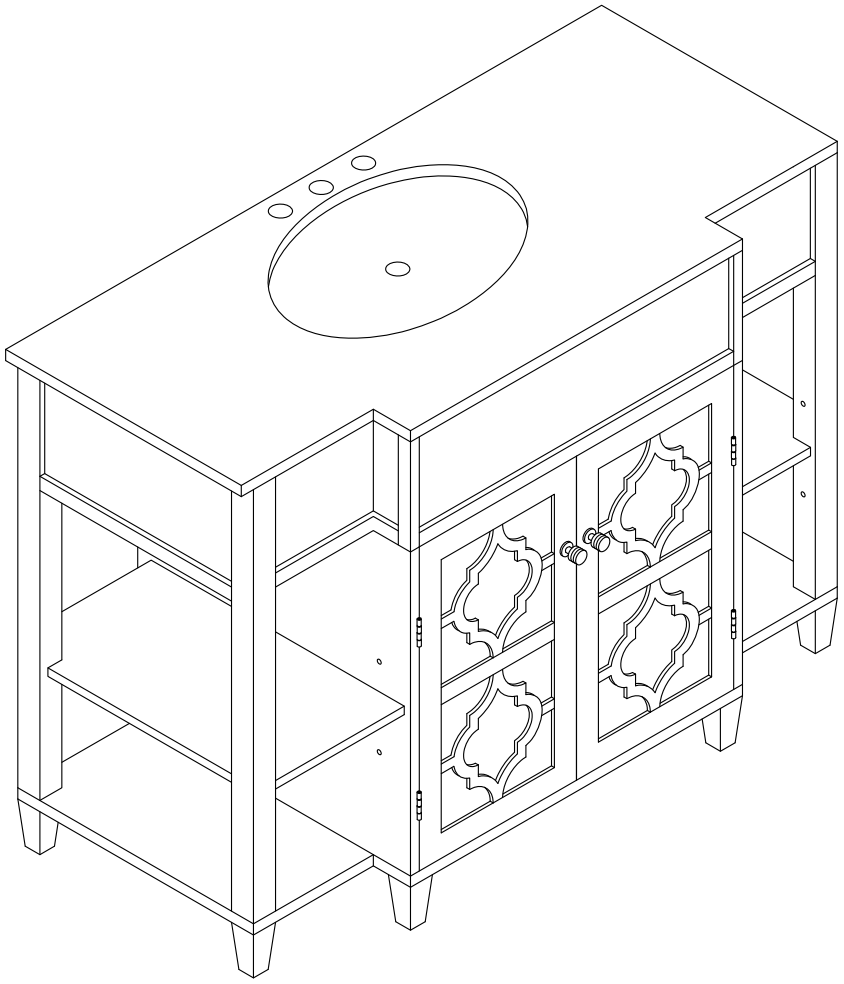

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. FOLLOWING INSTRUCTIONS LISTED BELOW IN THE PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

ASSEMBLY TOOLS REQUIRED

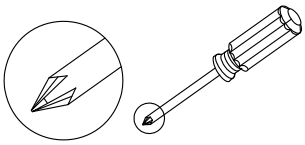

"+"Screw driver

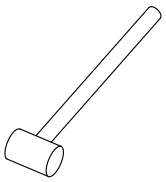

Rubber Mallet

Electric drill

WOODEN DOWEL INSTALLATION PROCEDURE

(1) FILL HOLE 1/4 FULL OF GLUE.
(2) GENTLY TAP DOWEL INTO HOLE
WITH RUBBER MALLET OR USE HAND PRESS IN.
DO NOT USE HAMMER
(3) WIPE AWAY EXCESS GLUE.

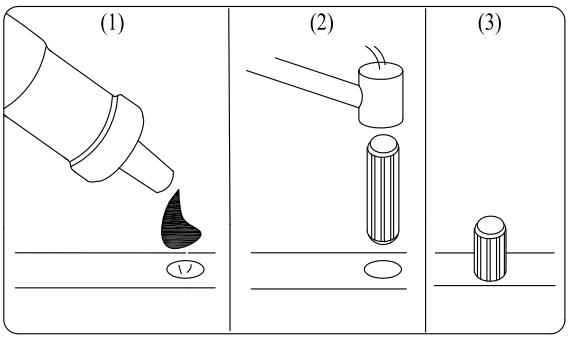

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS, WHICH MAY HAVE CAME LOOSE INSIDE THE CARTON DURING SHIPMENT. COUNT ALL PARTS AND MATERIAL HARDWARE, COMPARE WITH PARTS LIST TO BE SURE ALL PARTS ARE PRESENT. IF ANY PARTS ARE MISSING OR DAMAGED, PHONE, FAX OR MAIL TO OUR CUSTOMER SERVICE DEPARTMENT. FOR EFFICIENT AND SPEEDY SERVICE, PLEASE INDICATE THE MODEL NUMBER AND CODE LETTER OF THE PART NEEDED.

HARDWARE LIST

WOOD DOWEL 22 PCS 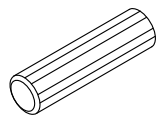 Ø8 x 30mm (1)	ROUND HEAD BOLT FLAT WASHER SPRING WASHER 19 SETS  Ø6 x 32mm (2)	ROUND HEAD BOLT FLAT WASHER SPRING WASHER 4 SETS  Ø6 x 70mm (3)	KNOB BOLT 2 SETS Ø3 x 19mm (4)
HINGE FLAT HEAD SCREW 4 SETS 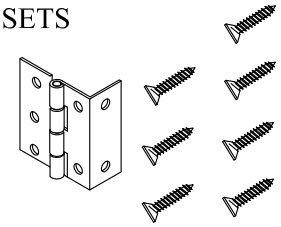 Ø3 x 12mm (5)	MAGNET LOCK ROUND HEAD SCREW 1 SET  Ø3 x 12mm (6)	IRON SLICE FLAT HEAD SCREW 2 SETS Ø3 x 6mm (7)	ROUND HEAD SCREW 20 PCS  Ø3 x 12mm (8)
SHELF HOLDER FLAT HEAD SCREW 12 PCS 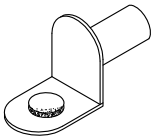 (9)	GLUE 1 PC  (10)	ALLEN KEY 1 PC  (11)	

PARTS LIST

BOTTOM PANEL 1 PC 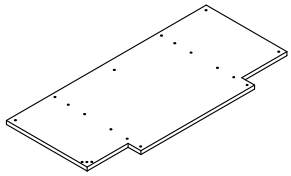 A	LEG 3 PCS  B	LEG 4 PCS  C
LEFT SIDE PANEL 1 PC  D	RIGHT SIDE PANEL 1 PC 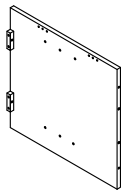 E	LEG 2 PCS 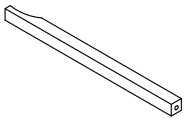 F
LEG 2 PCS  G	TOP FRAME 1 PC 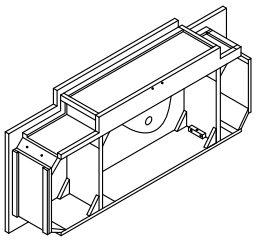 H	BACK PANEL 1 PC  I
BACK PANEL 1 PC  J	LEFT DOOR 1 PC 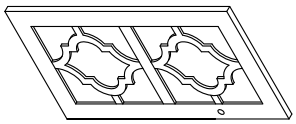 K	RIGHT DOOR 1 PC 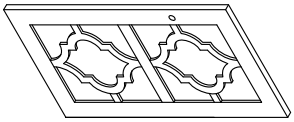 L
SHELF 1 PC 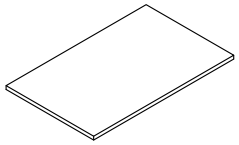 M	SHELF 2 PCS  N	

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

STEP 1: ASSEMBLE TOP FRAME (H) AND LEG (F & G)

• INSERT LEG (F & G) INTO RELEVANT CORNERS OF TOP FRAME (H) AS SHOWN.

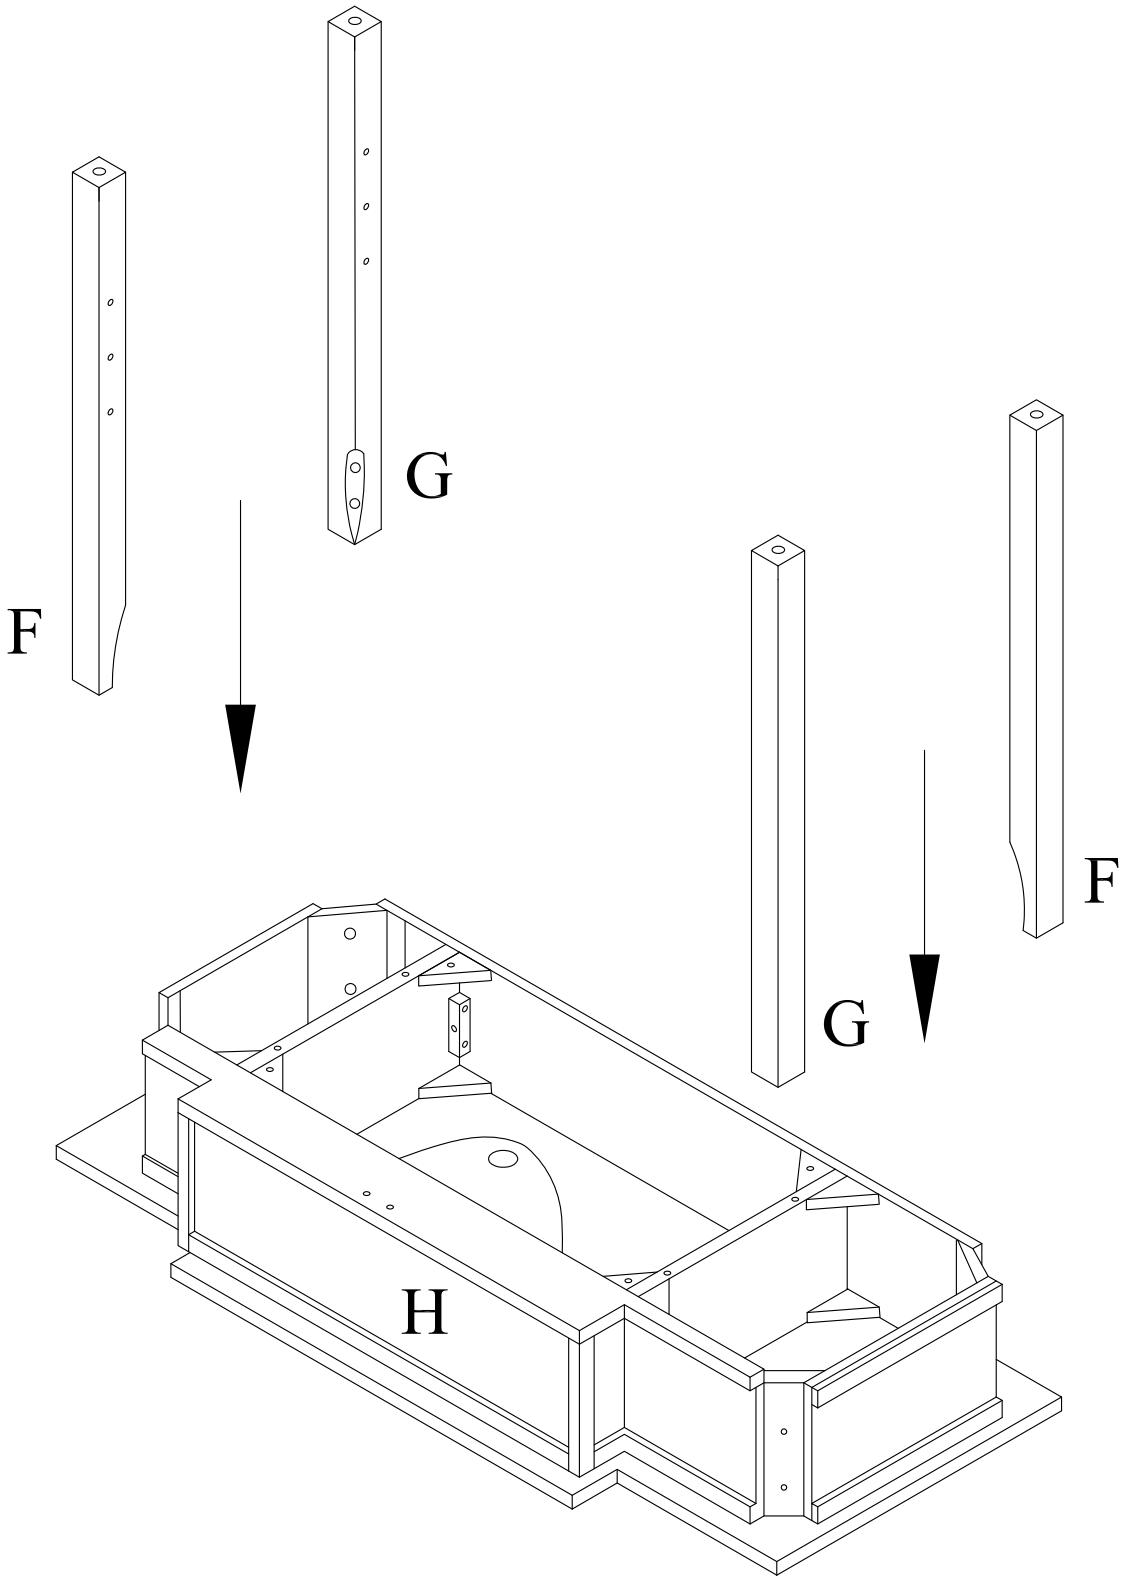

STEP 2: ASSEMBLE TOP FRAME (H) AND LEG (F & G)

- USE ROUND HEAD BOLT, SPRING WASHER AND FLAT WASHER (2) TO ASSEMBLE LEG (F & G) AND TOP FRAME (H) TOGETHER BY ALLEN KEY (11).

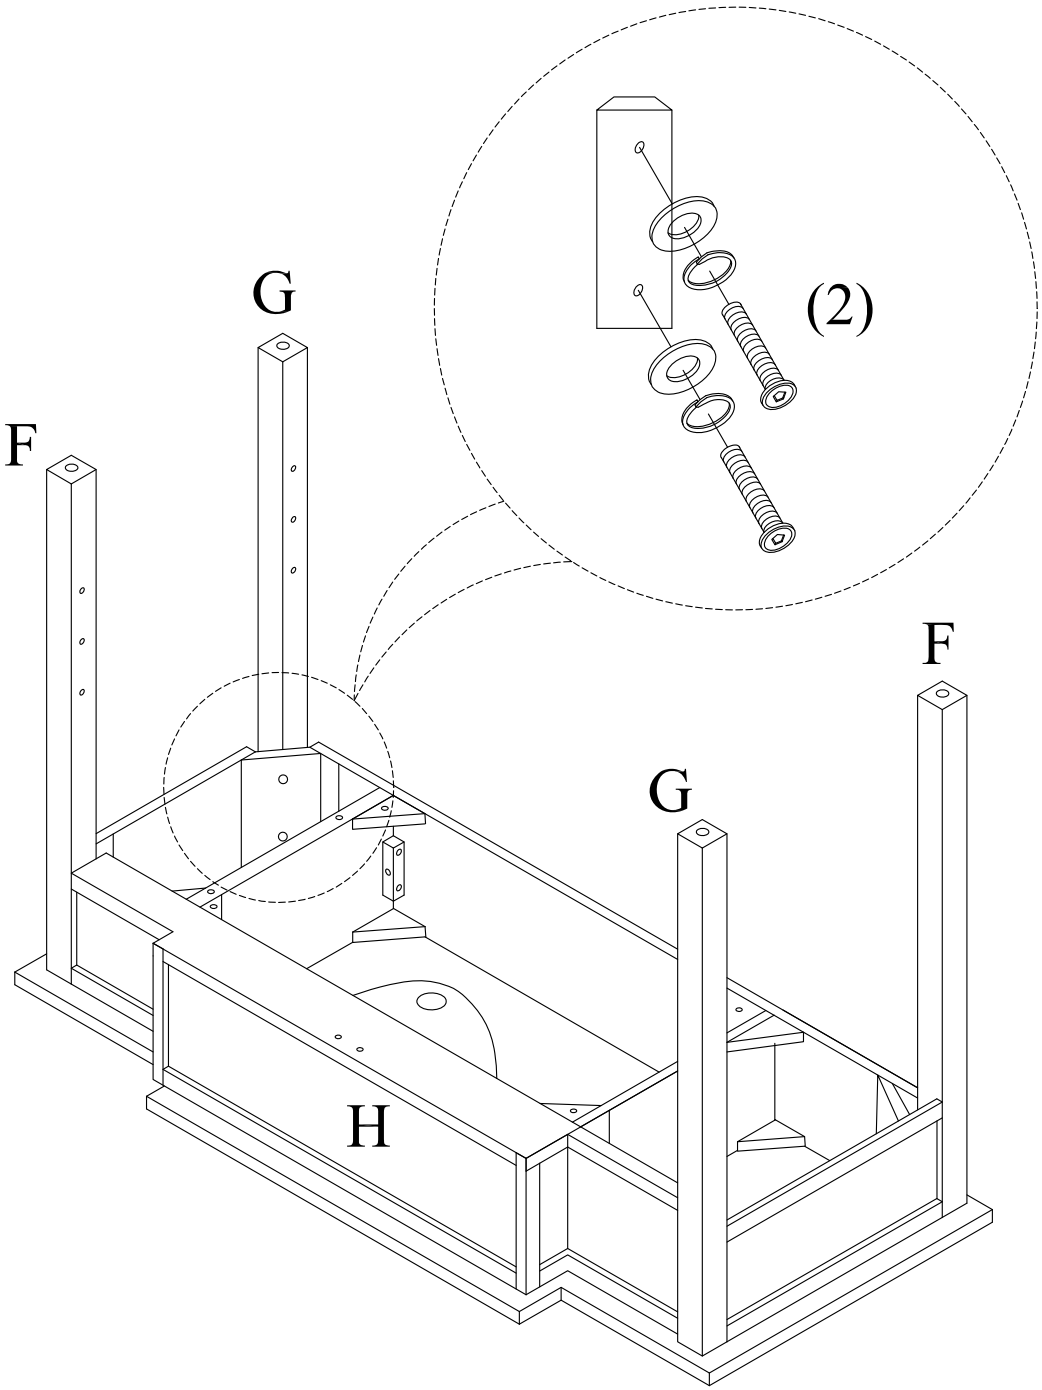

STEP 3: ASSEMBLE TOP PANEL (H) AND SIDE PANEL (D & E)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT, SPRING WASHER AND FLAT WASHER (2) TO ASSEMBLE SIDE PANEL (D & E) AND TOP PANEL (H) TOGETHER.

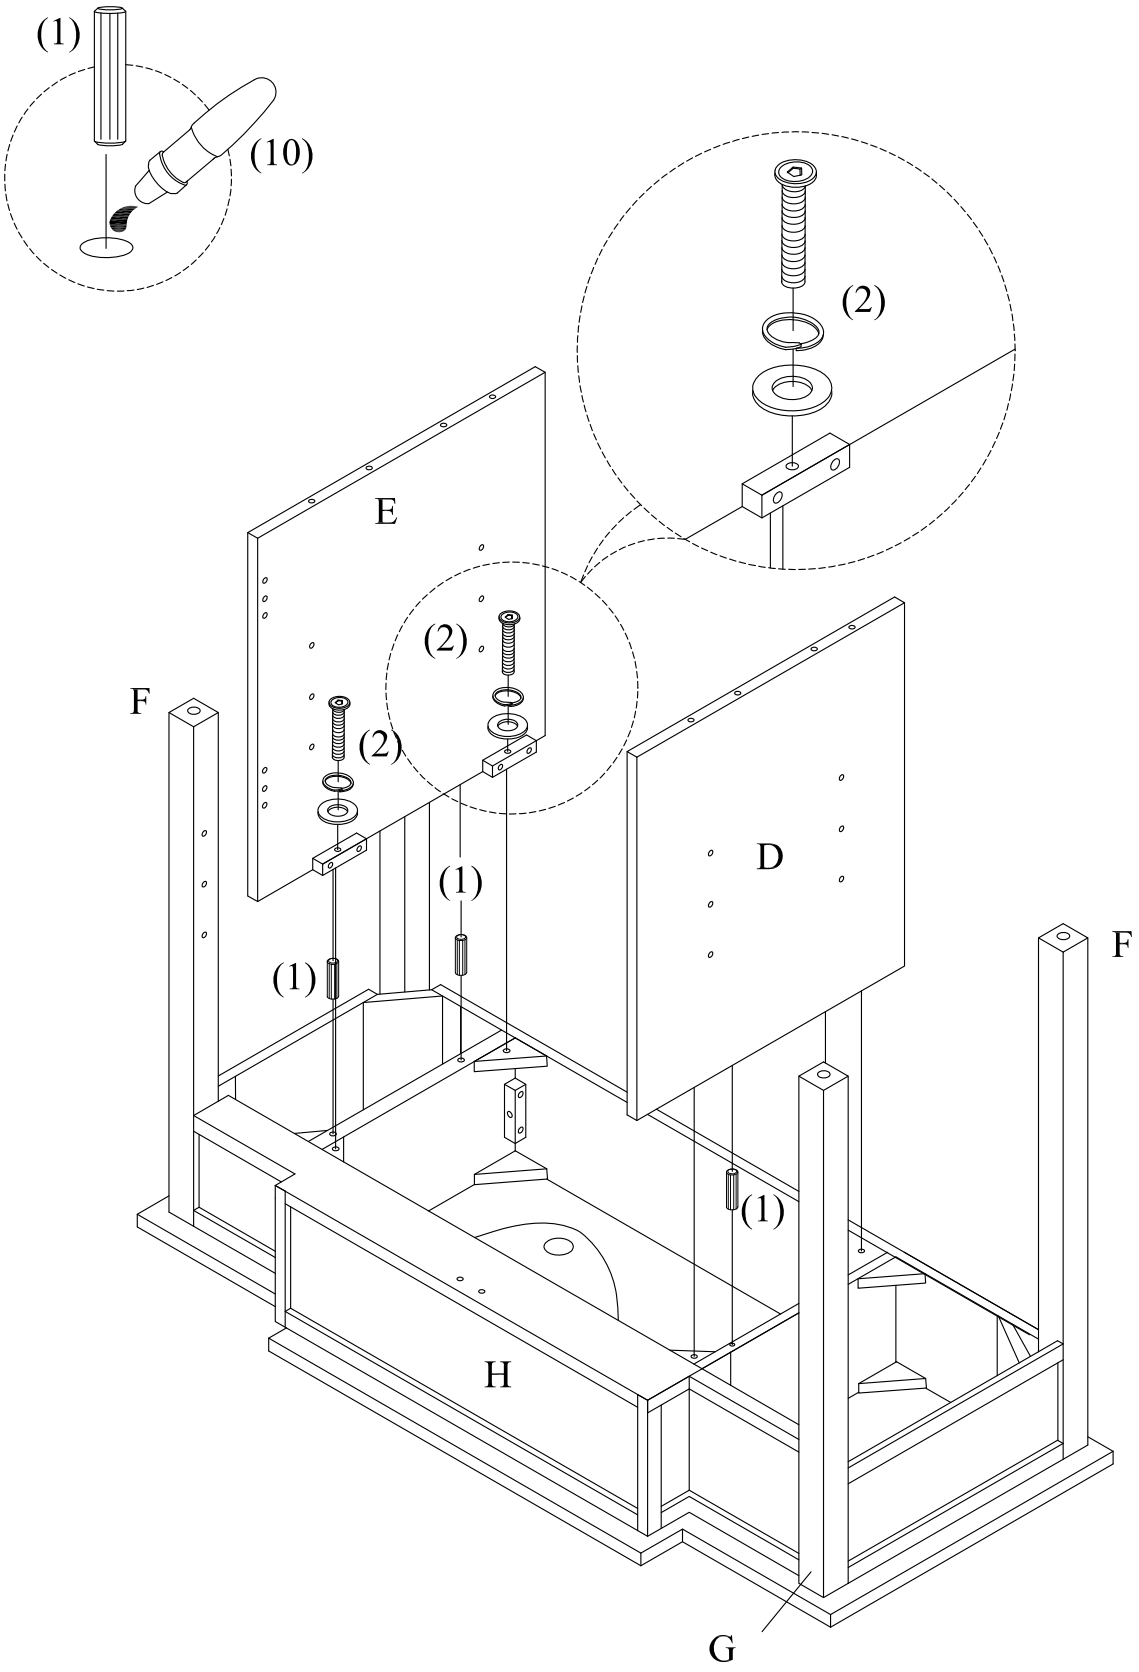

STEP 4: ASSEMBLE BOTTOM PANEL (A) AND LEG (B)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD SCREW, SPRING WASHER AND FLAT WASHER (2) TO ASSEMBLE BOTTOM PANEL (A) AND LEG (B) TOGETHER.

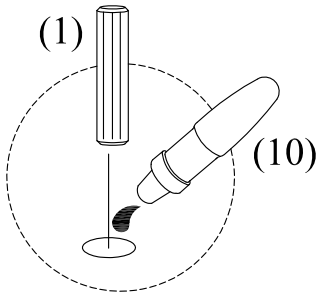

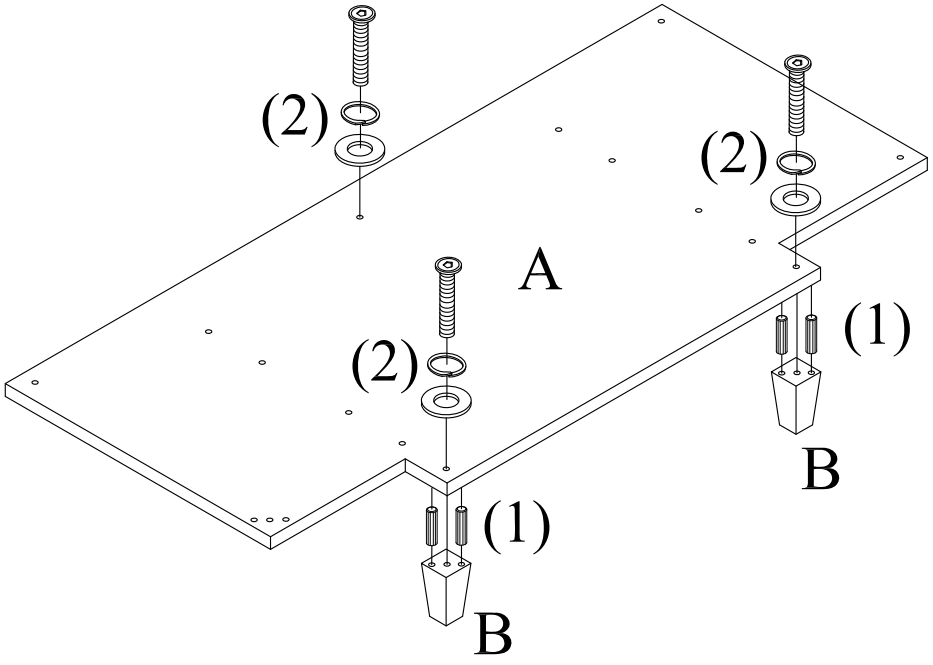

STEP 5: ASSEMBLE LEG (C & F & G) AND BOTTOM PANEL (A)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD SCREW, SPRING WASHER AND FLAT WASHER (2) TO ASSEMBLE BOTTOM PANEL (A) AND SIDE PANEL (D & E) TOGETHER.
- USE ROUND HEAD SCREW, SPRING WASHER AND FLAT WASHER (3) TO ASSEMBLE LEG (C & F & G) AND BOTTOM PANEL (A) TOGETHER AS SHOWN.

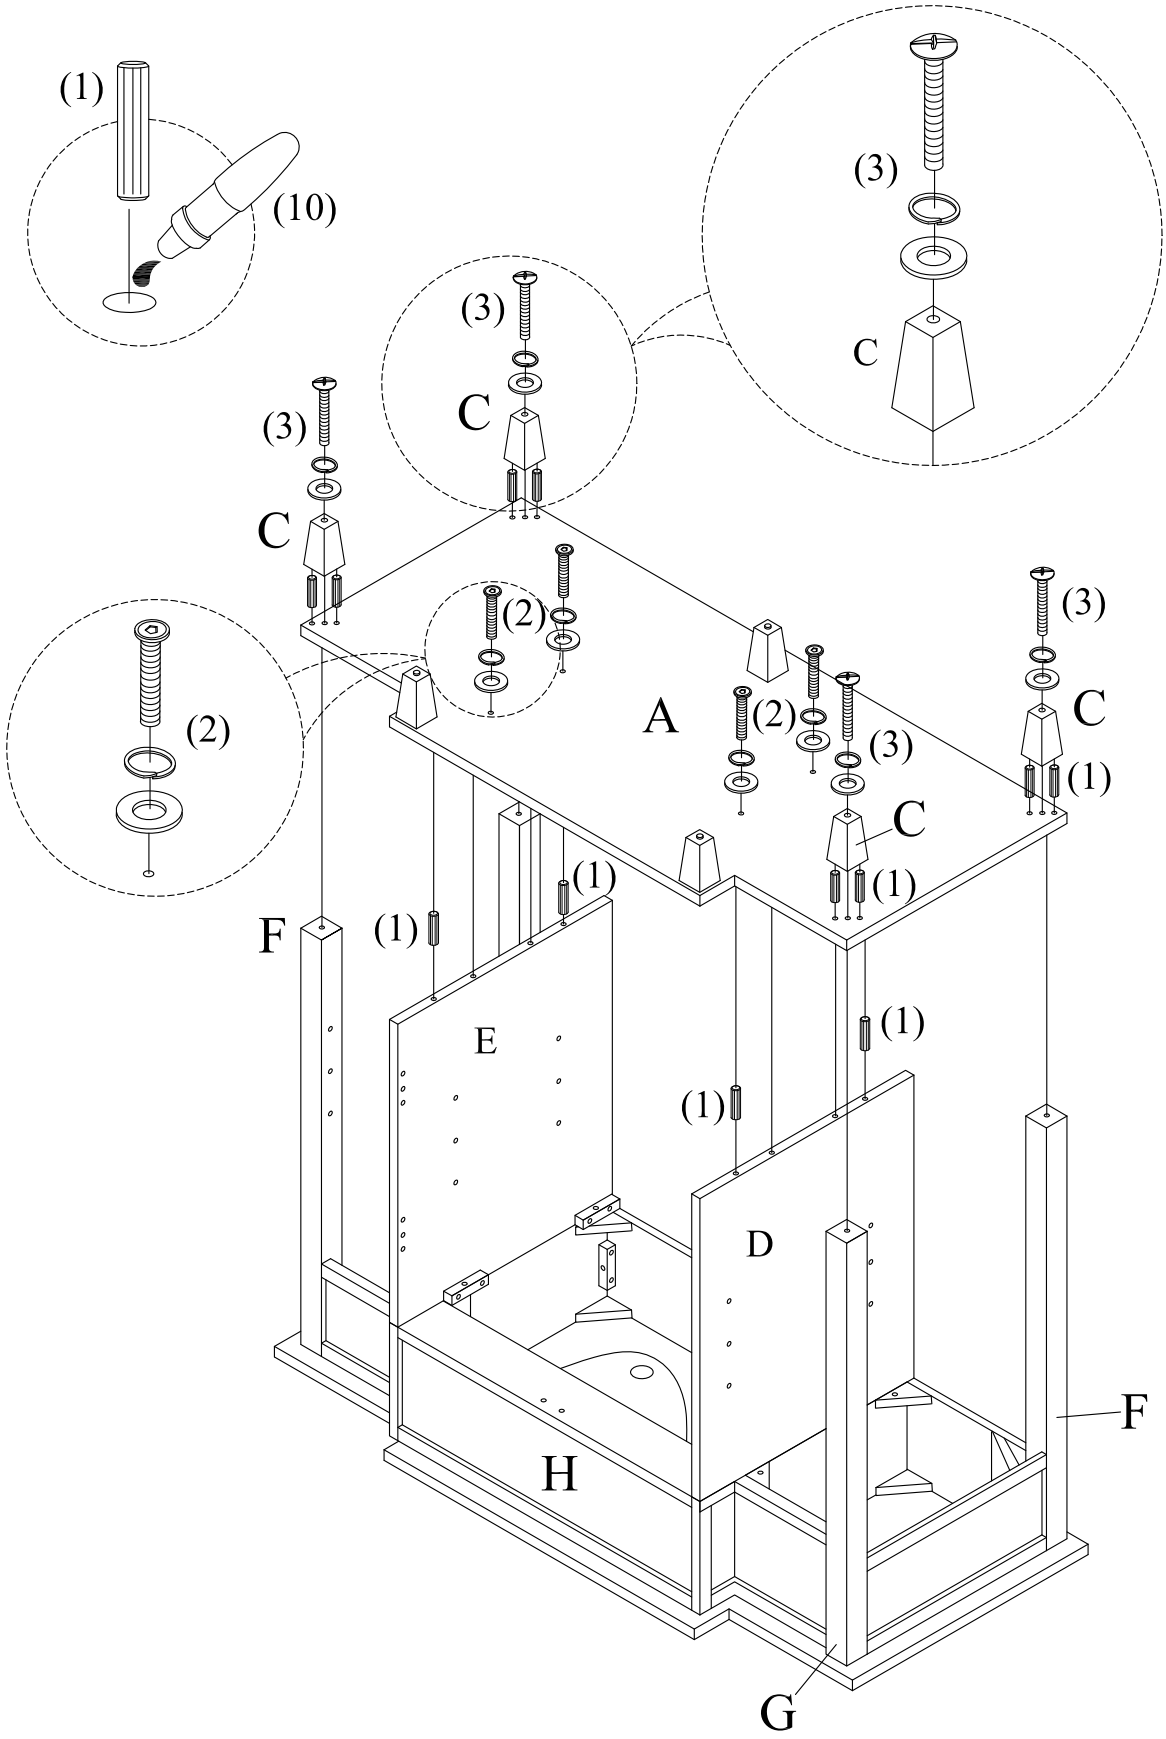

STEP 6: ASSEMBLE DOOR (K & L)

- USE FLAT HEAD SCREW (5) AND HINGE (5) TO ATTACH DOOR (K & L) ONTO SIDE PANEL (D & E).
- USE ROUND HEAD BOLT (4) TO ATTACH KNOB (4) ONTO DOOR (K & L).
- USE FLAT HEAD SCREW (7) TO ATTACH IRON SLICE (7) ONTO DOOR (K & L).
- USE FLAT HEAD SCREW (6) TO ATTACH MAGNET LOCK (6) ONTO TOP PANEL (H).

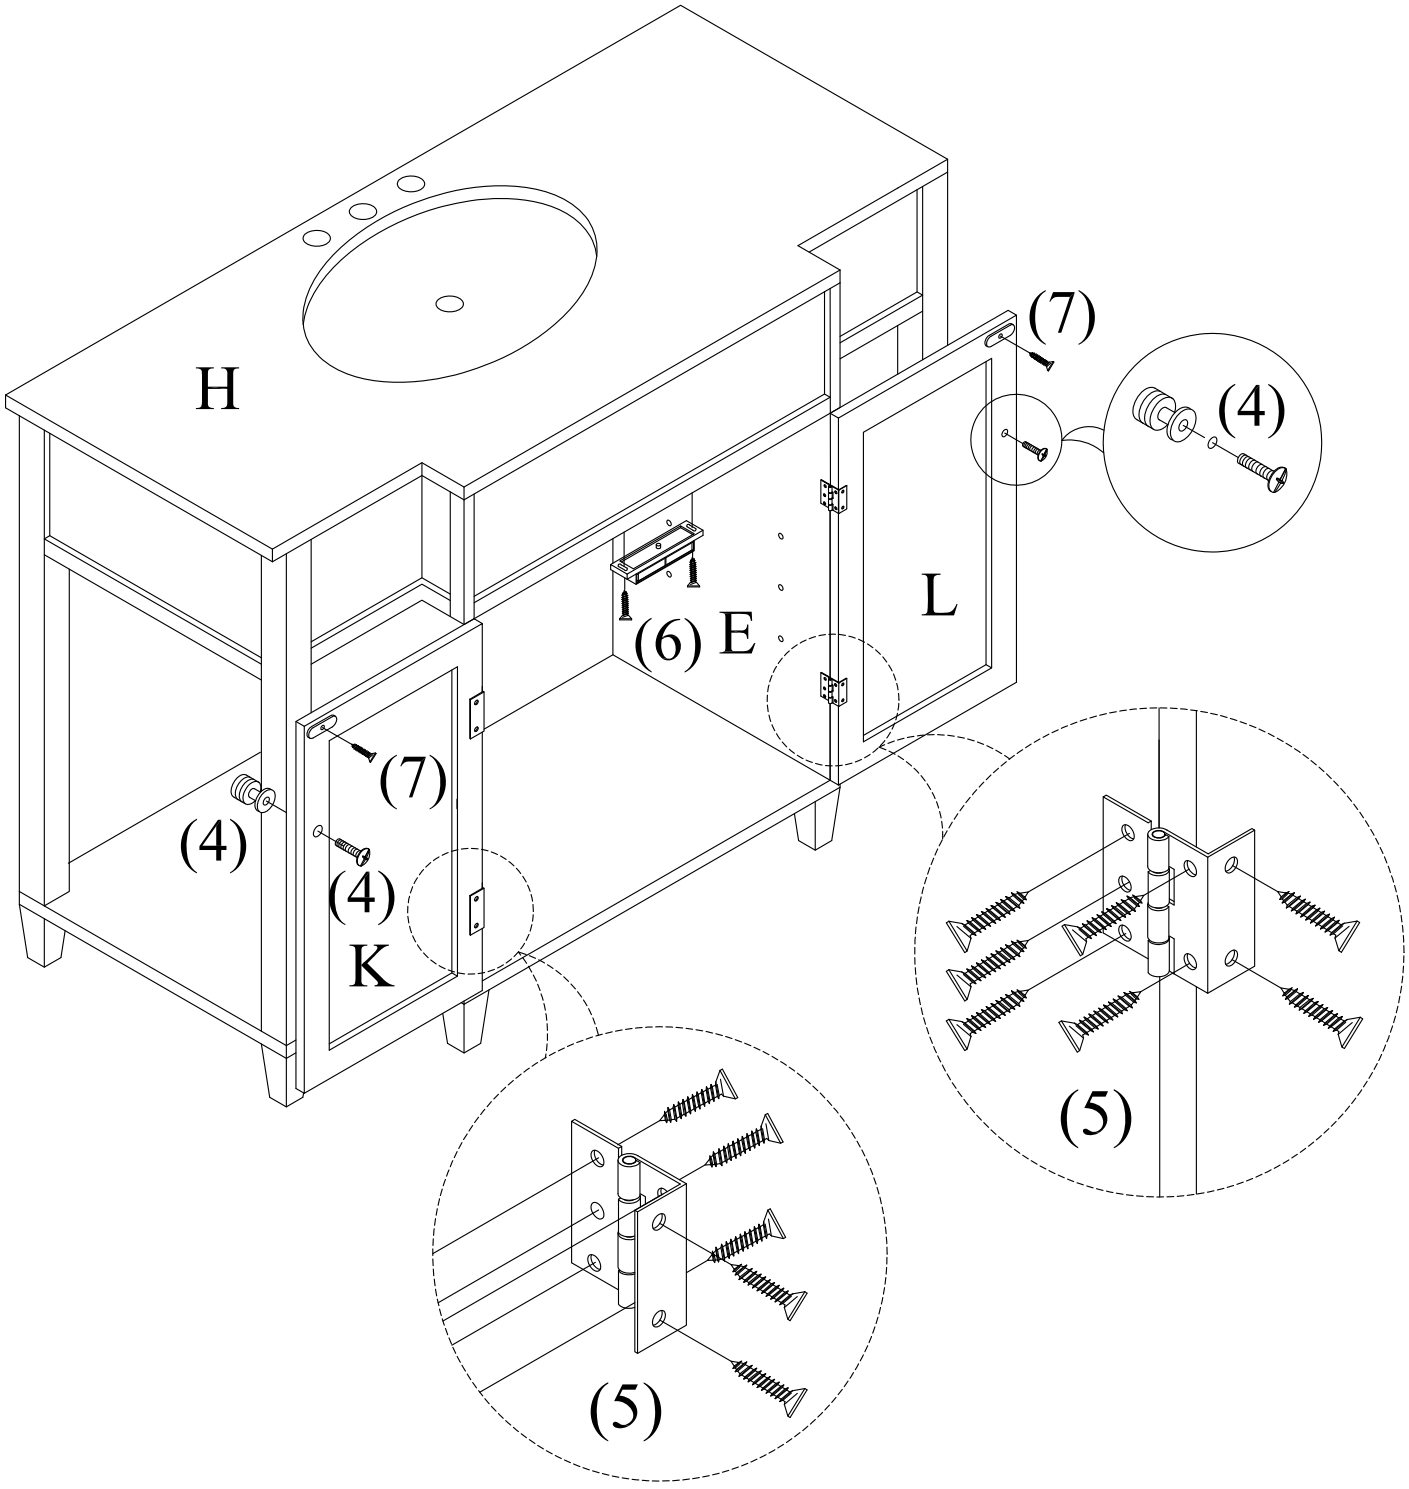

STEP 7: PLACE SHELF (M)

- INSERT SHELF HOLDERS (9) INTO THE HORIZONTAL HOLES INSIDE OF SIDE PANEL (D & E), THEN PUT SHELF (M) INSIDE.

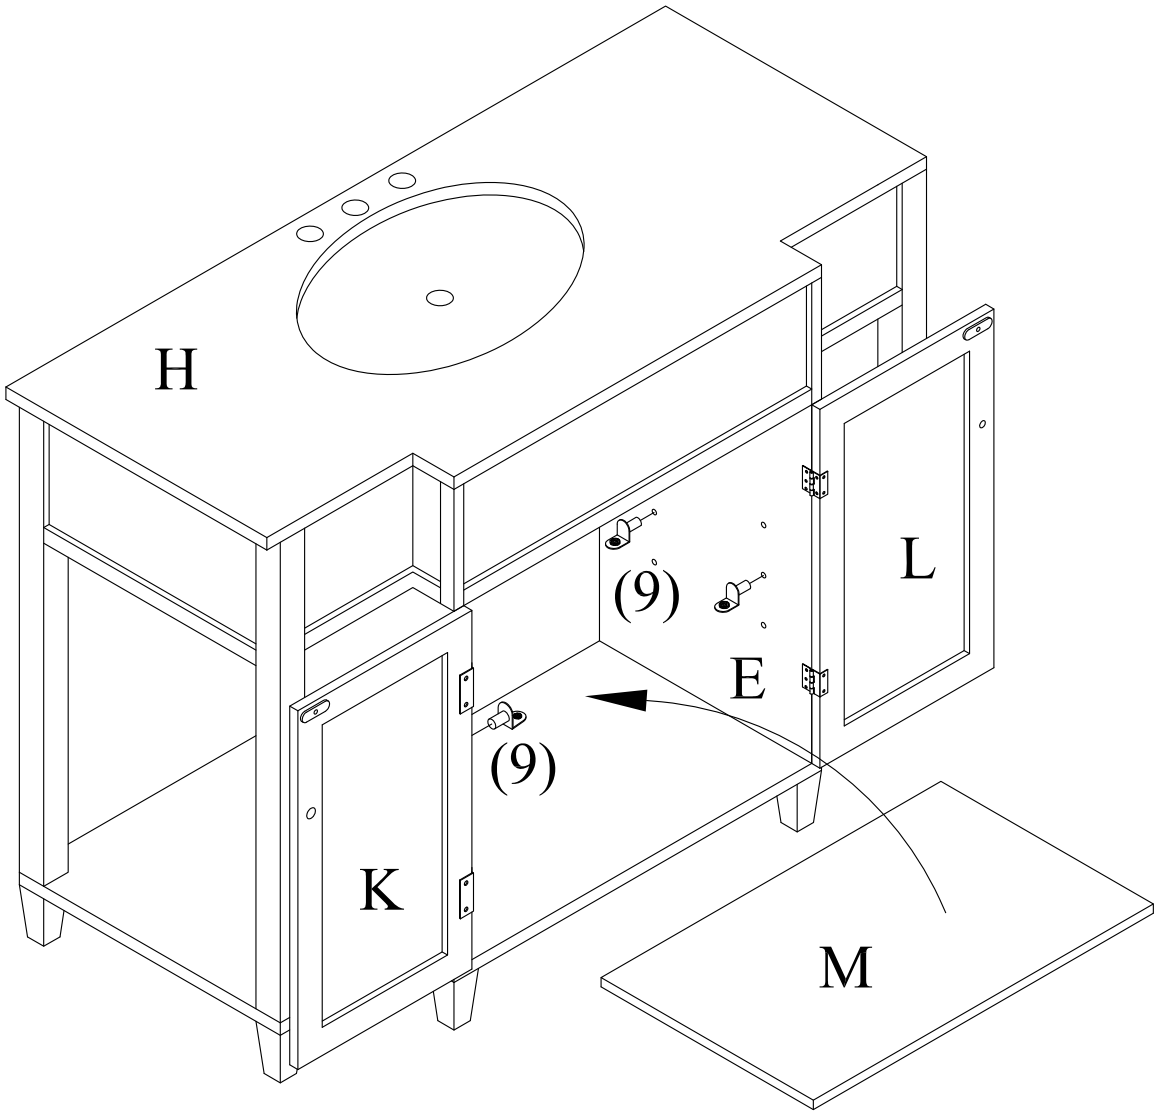

STEP 8: ASSEMBLE BACK PANEL (I & J)

- USE ROUND HEAD SCREW (8) TO ATTACH BACK PANEL (I & J) ON THE BACK OF PRE-ASSEMBLED UNIT.

NOTE: BEFORE YOU ASSEMBLE THE BACK PANEL, PLEASE MAKE SURE THE 2 SIDE PANELS AND DOORS HAVE AN EVEN GAP BETWEEN THEM. IF UNEVEN, SHIFT THE SIDE PANELS AND ADJUST DOORS UNTIL EVENLY SPACED, THEN ATTACH BACK PANEL.

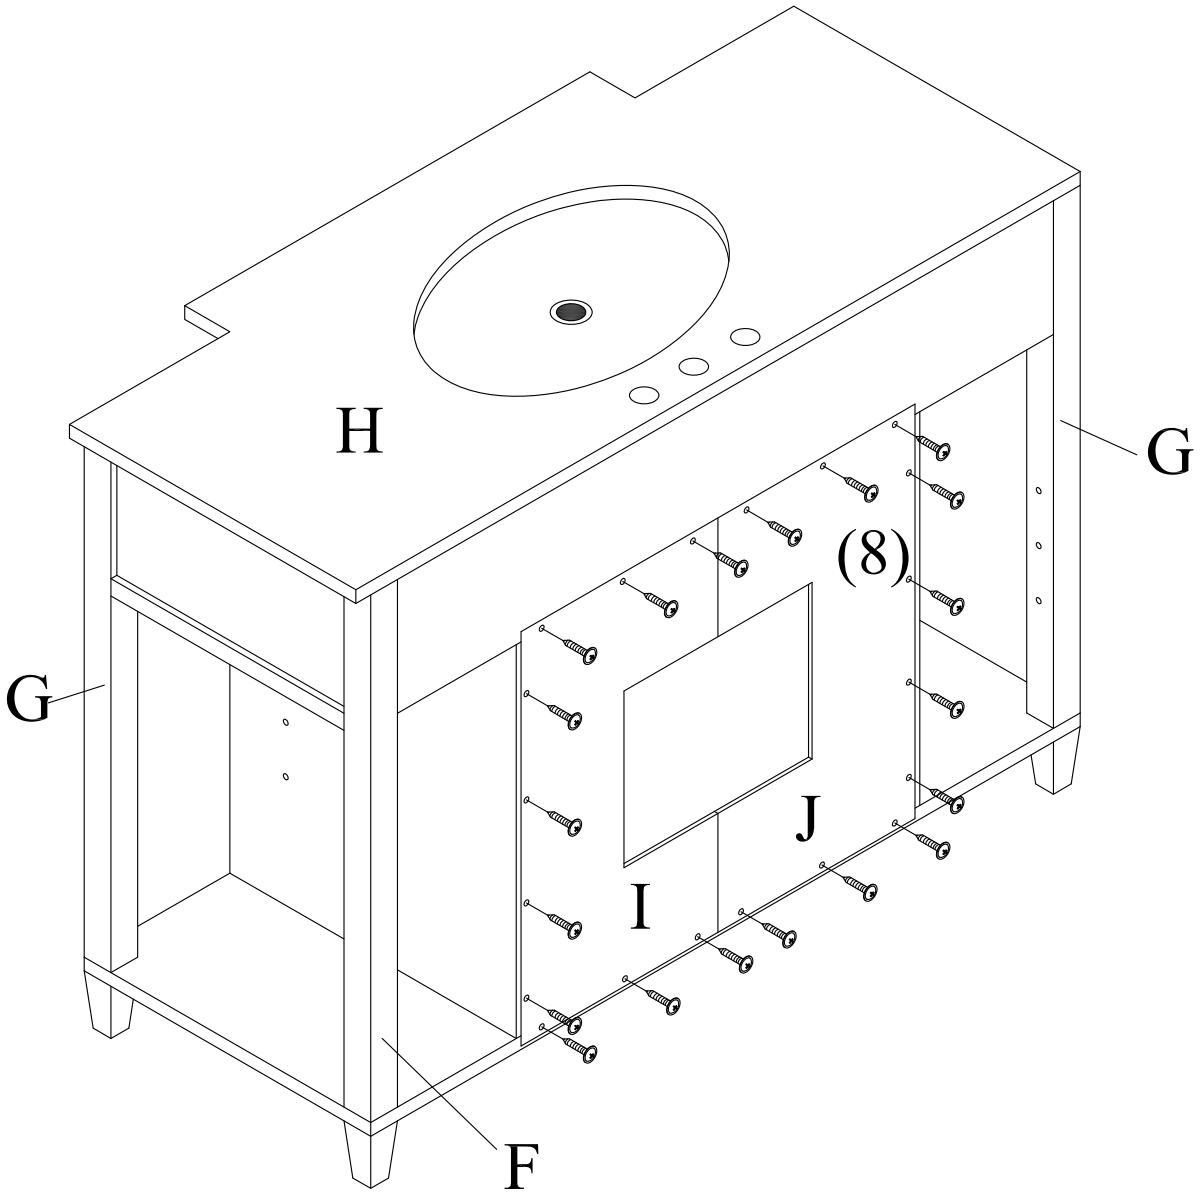

STEP 9: PLACE SHELF (N)

- INSERT SHELF HOLDERS (9) INTO THE HORIZONTAL HOLES INSIDE OF SIDE PANEL (D & E) AND LEG (F & G), THEN PUT SHELF (N) INSIDE.